



File Name: Deskjet 3510 User Manual.pdf

Size: 2931 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 8 May 2019, 13:10 PM

Rating: 4.6/5 from 742 votes.

Status: AVAILABLE

Last checked: 9 Minutes ago!

In order to read or download Deskjet 3510 User Manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Deskjet 3510 User Manual . To get started finding Deskjet 3510 User Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

Deskjet 3510 User Manual

This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. Try our automated HP Audio check! Click here Connect with HP support faster, manage all of your devices in one place, view warranty information and more. Learn more Select from the products you own. Thus, the warranty has been removed from this product. Any warranty support needed would be completed by the third party that sold the product. Please use the product number and serial numbers of the new product to validate warranty status. Any warranty support needed would be completed by the reseller that sold the product. It matches the product Please enter a Product Number to complete the request. Learn more about HP's privacy policy This process can take several minutes depending on the number of warranties being checked. We apologize for this inconvenience and are addressing the issue. Please try again shortly. Page Count 62 Press the button to view wireless status and menu options. Press and hold down the button until light blinks to start WiFi Protected Setup WPS push button mode. 8 ePrint status light and button White light indicates ePrint connection. Pressing button displays the Web Services Menu where you can view printers email address and make ePrint settings. 9 On button Turns the printer on or off. You can use the printer display to retrieve information about your wireless network, establish a wireless connection, and more. How do I Instructions Print network configuration page. The network configuration page will display the network status, hostname, network name, and more. 1. Press the Wireless button to access the Wireless Status screen. 2. Press the Settings button to access the Wireless Settings menu. 3. Select Print Report, and then select Configuration Page. <http://phakee.com/upload/bosch-ppw-2201-manual.xml>

- **hp 3510 user manual, deskjet 3510 user manual, hp deskjet 3510 user manual.**

Chapter 2 6 Get to know the HP Deskjet 3510 series Get to know the HP Deskjet 3510 series The wireless network test report will display the diagnostics results for the status of the wireless network, wireless signal strength, detected networks, and more. 1. Press the Wireless button to access the Wireless Status screen. 2. Press the Settings button to access the Wireless Settings menu. 3. Select Print Report, and then select Test Report. Restore network settings to default settings. 1. Press the Wireless button to access the Wireless Status screen. 2. Press the Settings button to access the Wireless Settings menu. 3. Select Restore to Default. 4. Confirm selection to restore defaults. Establish a WiFi Protected Setup WPS connection. Press Wireless button to access wireless menu on the printer display. Use wireless menu to enable wireless printing. Slow blinking Wireless is on but not connected to a network. If connection cannot be established, make sure printer is within range of wireless signal. Fast blinking Wireless error has occurred. Refer to messages on printer display. On Wireless connection has been established and you can print. Press ePrint button to access ePrint menu on the printer display. On ePrint is on and connected. On button light Light behavior Solution Off The device is powered off. Pulsing Indicates the device is in sleep mode. The device automatically enters sleep mode after 5 minutes of inactivity. Fast blinking Error has occurred. Blinking steadily The printer is printing, scanning, or copying. On Printer is on and ready to print. Auto PowerOff Auto PowerOff is automatically enabled by default when you turn on the printer. When Auto PowerOff is enabled, the printer automatically turns off after 2 hours of inactivity to help reduce energy use. Auto PowerOff is automatically disabled when the printer establishes a wireless or Ethernet if supported network connection. <http://asp.perm.ru/content/bosch-ppw-2201-manual.xml>

You can change the Auto PowerOff setting from the control panel. Once you change the setting, the

printer maintains the setting. Auto PowerOff turns the printer off completely, so you must use the On button to turn the printer back on. To change Auto PowerOff setting 1. From the Control Panel home screen, which displays Copy, Scan, and Quick Forms, select Settings. NOTE If you do not see the home screen, press the Back button until you can see it. 2. From the Settings menu on the printer display, select Preferences. 3. From the Preferences menu, select AutoOff. 4. From the AutoOff menu, select On or Off, and then press Continue to confirm the setting. TIP If you are printing over a wireless or Ethernet connected network, Auto PowerOff should be disabled to ensure that print jobs do not get lost. Even when Auto PowerOff is disabled, the printer enters Sleep mode after 5 minutes of inactivity to help reduce energy use.

Chapter 2 8 Get to know the HP Deskjet 3510 series Get to know the HP Deskjet 3 510 series Print photos Print documents Print envelopes Print Quick Forms See Tips for print success for more information. Print photos To print a photo on photo paper 1. Make sure the output tray is open. 2. Remove all paper from the paper tray, and then load the photo paper with side to be printed on facing up. NOTE If the photo paper you are using has perforated tabs, load photo paper so that tabs face outward. See Load media for more information. 3. On the File menu in your software application, click Print. 4. Make sure the product is the selected printer. 5. Click the button that opens the Properties dialog box. Print 9 Print If you want to print Max DPI in grayscale, select High Quality Grayscale from Print in Grayscale on the dropdown list, and then select Max DPI, after selecting Photo Paper, Best Quality. 7. Click OK to return to the Properties dialog box. 8. Click OK, and then click Print or OK in the Print dialog box.

NOTE Do not leave unused photo paper in the input tray. The paper might start to curl, which could reduce the quality of your printout. Photo paper should be flat before printing. Print documents To print a document 1. Make sure the paper output tray is open. 2. Make sure you have paper loaded in the input tray. See Load media for more information. 3. From your software application, click the Print button. 4. Make sure the product is the selected printer. 5. Click the button that opens the Properties dialog box. NOTE 1 You can print your document on both sides of the paper, instead of just one side. Click OK to print. After the even numbered pages of the document have been printed, remove the document from the output tray. Reload the paper in the input tray with the blank side up, and top of page down. Return to the Pages to Print dropdown menu and then select Print Odd Pages Only. Click OK to print. NOTE 2 If your printed documents are not aligned within the margins of the paper, make sure that you have selected the correct language and region. On the printer display, select Settings, and then select Preferences. Chapter 3 10 Print Print Print Quick Forms 1. Select Quick Forms from the printer display menu. TIP If the Quick Forms option does not appear on the printer display menu, press the Back button until the Quick Forms option appears. 2. Press the Up and Down buttons to select one of the Quick Forms options. Then press OK. 3. After you have selected the type of form that you want to print, select the number of copies, then press OK. Print envelopes You can load one or more envelopes into the input tray of the HP Deskjet 3510 series. Do not use shiny or embossed envelopes or envelopes that have clasps or windows. NOTE For specific details on how to format text for printing on envelopes, consult the help files in your word processing software.

<http://www.drupalitalia.org/node/79848>

For best results, consider using a label for the return address on envelopes. To print envelopes 1. Make sure the output tray is open. 2. Slide the paper guide all the way to the left. 3. Place the envelopes in the right side of the tray. The side to be printed on should face up. See Load media for more information. 4. Push the envelopes into the printer until they stop. 5. Slide the paper guide firmly against the edge of the envelopes. 6. On the File menu in your software application, click Print. 7. Make sure the product is the selected printer. 8. Click the button that opens the Properties dialog box. Print envelopes 11 Print NOTE If you do not see the home screen, press the Back button until you can see it. From the Settings menu, select Tools. Scroll through the Tools menu

until you see Clean Ink Smear, then select OK. Follow the onscreen instructions. NOTE When you receive a low ink warning message, consider having a replacement cartridge available to avoid possible printing delays. NOTE You can print your document on both sides of the paper, instead of just one side. From the Pages to Print dropdown menu select Print Even Pages Only. Click OK to print. After the even numbered pages of the document have been printed, remove the document from the output tray. Reload the paper in the input tray with the blank side up, and top of page down. Return to the Pages to Print dropdown menu and then select Print Odd Pages Only. From the Print in Grayscale dropdown menu select Black Ink Only, then click the OK button. Print using the maximum dpi Use maximum dots per inch dpi mode to print high quality, sharp images on photo paper. See technical specifications for the print resolution of the maximum dpi mode. Printing in maximum dpi takes longer than printing with other settings and requires a large amount of disk space. To print in Maximum dpi mode 1. Make sure you have photo paper loaded in the input tray. 2.

<http://www.multicom-media.de/images/Cub-Cadet-Lawn-Mowers-Manual.pdf>

On the File menu in your software application, click Print. 3. Make sure the product is the selected printer. 4. Click the button that opens the Properties dialog box. Print using the maximum dpi 13 Print Just send your documents and photos to the email address assigned to your printer when you have enabled Web Services. No additional drivers or software are needed. The printer is connected to an active network providing Internet access. Web Services is turned on. If not, you will be prompted to turn it on. To ePrint a document from anywhere 1. Enable Web Services. a. From the printer control panel, press the ePrint button. b. Accept the Terms of Use, and then follow the onscreen instructions to enable Web Services. c. Print the ePrint information page, and then follow the instructions on the page to sign up for an ePrint account. 2. Find your ePrint email address. a. Press the ePrint button on the control panel. You will see the Web Services Settings menu on the printer display. b. Select Display Email Address from the printer display to view the printer's email address. TIP To print the email address or registration url, select Print Info Page from the Settings menu on the printer display. 3. Email your document to the printer for printing. a. Create a new email and attach the document to print. b. Send the email to the printer email address. The printer prints the attached document. TIP If you have enabled Auto PowerOff, you should disable it before using ePrint. For more information, see Auto PowerOff NOTE 1 The email will be printed once it is received. As with any email, there is no guarantee when or whether it will be received. You can check the print status on ePrintCenter www.eprintcenter.com. NOTE 2 Documents printed with ePrint may appear different from the original. Style, formatting, and text flow may differ from the original document.

<http://dieter-sauter.com/images/Cub-Cadet-Lawn-Tractor-Hds-2185-Manual.pdf>

For documents that need to be printed with a higher quality such as legal documents, we recommend that you print from the software application on your computer, where you will have more control over what your printout looks like. Click here to go online for more information. Look for papers with the ColorLok logo in a variety of weights and sizes from major paper manufacturers. It resists water, smears, fingerprints, and humidity. Your prints have a look and feel comparable to a storeprocessed photo. It is available in several sizes, including A4, 8.5 x 11 inch, 10 x 15 cm 4 x 6 inch with or without tabs, 13 x 18 cm 5 x 7 inch, and two finishes glossy or soft gloss satin matte. It is acidfree for longer lasting documents. This affordable, photo paper dries quickly for easy handling. Get sharp, crisp images when you use this paper with any inkjet printer. It is available in semigloss finish in several sizes, including A4, 8.5 x 11 inch, and 10 x 15 cm 4 x 6 inch with or without tabs. For longerlasting photos, it is acidfree. They are the perfect choice for nearphotographic reproductions and business graphics for report covers, special presentations, brochures, mailers, and calendars. They are heavyweight for an impressive look and feel. It is

opaque enough for two-sided color usage with no showthrough, which makes it ideal for newsletters, reports, and flyers. It features ColorLok Technology for less smearing, bolder blacks, and vivid colors. Paper basics 17 Paper basics It features ColorLok Technology for less smearing, bolder blacks, and vivid colors. It is suitable for copies, drafts, memos, and other everyday documents. It features ColorLok Technology for less smearing, bolder blacks, and vivid colors. This film is easy to use and handle and dries quickly without smudging.

Original HP inks and HP Advanced Photo Paper have been designed to work together so your photos are long-lasting and vivid, print after print. Great for printing out an entire vacation's worth of photos or multiple prints to share. Load fullsize paper a. Raise the input tray. Raise the input tray. b. Lower the output tray. Lower the output tray and pull out the tray extender. Chapter 5 18 Paper basics Paper basics Slide paperwidth guide to the left. d. Load paper. Insert stack of paper into input tray with short edge forward and print side up. Slide stack of paper down until it stops. Slide paperwidth guide to the right until it stops at edge of paper. Load smallsize paper a. Load media 19 Paper basics NOTE If the photo paper you are using has perforated tabs, load photo paper so that tabs are on top. Slide paperwidth guide to the right until it stops at edge of paper. Load envelopes a. Raise the input tray. Lower the output tray and pull out the tray extender. c. Slide paperwidth guide to the left. Slide paperwidth guide to the left. Chapter 5 20 Paper basics Paper basics The side to be printed on should face up. The flap should be on the left side and facing down. Slide stack of envelopes down until it stops. Slide paperwidth guide to the right against stack of envelopes until it stops. Load media 21 Paper basics Easy Copy a. Load paper. Load fullsize paper in the paper tray. b. Load original. Lift lid on product. Load original print side down on right front corner of glass. Copy and scan 23 Copy and scan Then press OK to confirm. Press the button next to Start Black Copy or Start Color Copy to copy onto A4 or 8.5" x 11" plain paper. A plain paper setting will print in plain paper normal print quality. A photo paper setting will print in photo paper best quality. Resize Actual size makes a copy that is the same as the size of the original, but the margins of the copied image may be clipped.

Resize to fit makes a copy that is centered with a white border around the edges. The resized image is either enlarged or reduced to fit the size of the selected output paper. NOTE After two minutes of inactivity the copy options will automatically return to the default settings of plain paper A4 or 8.5" x 11" depending on region. Scan to a computer You can initiate a scan from the control panel of the printer or from your computer. Scan from the control panel if you want to quickly scan one page to an image file. Load original. Lift lid on product. Load original print side down on right front corner of glass. Chapter 6 24 Copy and scan Copy and scan If you do not see Scan on the printer display press the Back button until you do. 2. Select Scan to Computer. 3. Select the computer that you want to scan to from the printer display. If you do not see your computer listed on the printer display make sure that your computer is connected to the printer either wirelessly or through a USB cable. If you have a wireless connection and you have confirmed that the connection is working, you will need to enable wireless scanning in the software. a. Doubleclick the HP Deskjet 3510 series desktop icon to open the Printer Software. NOTE You can choose to keep the Scan to Computer option always active. If this feature is always active, you will be able to select the Scan option from the printer display to scan to your wirelessly connected computers that are in use. If this feature is not always active, then you will need to first activate the Scan to Computer option in the Printer Software before you scan. This only affects the Scan button on the printer control panel. Whether Scan to Computer is active or not, you will always be able to make a scan from your computer 4. Locate the scanned image on your computer. After the scan is saved, a Windows Explorer window will open in the directory where the scan was saved.

NOTE There is a limited number of computers that can have the scan function activated at the same time. Press the Scan button on the printer and you will see the computers that are currently

available for scanning. Scan from your computer 1. Open the HP Scan application. NOTE If Show Scan Preview is selected, you will be able to make adjustments to the scanned image in the preview screen. 3. Select Save if you want to keep the application open for another scan, or select Done to exit the application. 4. After the scan is saved, a Windows Explorer window will open in the directory where the scan was saved. Chapter 6 26 Copy and scan Copy and scan Then the printer displays the current ink levels. NOTE If you do not see the home screen, press the Back button until you can see it. To check the ink levels from the Printer Software 1. Doubleclick the HP Deskjet 3510 series desktop icon to open the Printer Software. NOTE 1 If you have installed a refilled or remanufactured cartridge, or a cartridge that has been used in another printer, the ink level indicator might be inaccurate or unavailable. NOTE 2 Ink level warnings and indicators provide estimates for planning purposes only. When you receive a low ink warning message, consider having a replacement cartridge available to avoid possible printing delays. You do not have to replace the cartridges until the print quality is unacceptable. NOTE 3 Ink from the cartridges is used in the printing process in a number of different ways, including in the initialization process, which prepares the product and cartridges for printing, and in printhead servicing, which keeps print nozzles clear and ink flowing smoothly. In addition, some residual ink is left in the cartridge after it is used. Work with cartridges 27 Work with cartridges The correct cartridge number will be automatically displayed when you use this link.

Original HP cartridges are designed and tested with HP printers to help you easily produce great results, time after time. Wait for print carriage to move to center of the product. b. Press down to release cartridge, then remove it from slot. Chapter 7 28 Work with cartridges Work with cartridges During single cartridge mode, the product can copy documents, copy photos, and print jobs from the computer. NOTE When the HP Deskjet 3510 series operates in singlecartridge mode, a message is displayed on screen. If the message is displayed and two print cartridges are installed in the product, verify that the protective piece of plastic tape has been removed from each print cartridge. When plastic tape covers the print cartridge contacts, the product cannot detect that the print cartridge is installed. Exit singlecartridge mode Install two print cartridges in the HP Deskjet 3510 series to exit singlecartridge mode. This warranty does not cover HP ink products that have been refilled, remanufactured, refurbished, misused, or tampered with. During the warranty period the product is covered as long as the HP ink is not depleted and the end of warranty date has not been reached. Chapter 7 30 Work with cartridges Work with cartridges To connect the HP Deskjet 3510 series to a wireless network using Wi-Fi Protected Setup WPS, you will need the following. NOTE The HP Deskjet 3510 series only supports connections using 2.4GHz. A desktop computer or laptop with either wireless networking support, or a network interface card NIC. The computer must be connected to the wireless network that you intend to install the HP Deskjet 3510 series on. NOTE If you have a Wi-Fi Protected Setup WPS router with a WPS push button, follow the Push Button method. If you are not certain your router has a push button, follow the Wireless Settings Menu method. Push Button PBC method 1.

Press and hold the Wireless button on the printer until the wireless light starts blinking. Press and hold for 3 seconds to start WPS push button mode. 2. Press the Wi-Fi Protected Setup WPS button on your router. NOTE The product begins a timer for approximately two minutes while a wireless connection is established. Wireless Settings Menu method 1. Press the Wireless button on the printer to display the Wireless menu. If the printer is printing, in an error state, or performing a critical task, wait until the task has been completed or the error cleared before pressing the Wireless button. 2. Select Settings from the printer display. 3. Select Wi-Fi Protected Setup from the printer display. 4. If you have a Wi-Fi Protected Setup WPS router with a WPS push button, select Push Button, and then follow the onscreen instructions. If your router does not have a push button or you are not certain if your router has a push button, select PIN, and then follow the onscreen instructions. NOTE The product begins a timer for approximately four minutes during

which the corresponding button on the networking device needs to be pressed or the router PIN needs to be entered on the router's configuration page. Connectivity 31 Connectivity NOTE The HP Deskjet 3510 series only supports connections using 2.4GHz. A desktop computer or laptop with either wireless networking support, or a network interface card NIC. The computer must be connected to the wireless network that you intend to install the HP Deskjet 3510 series on. Network name SSID. WEP key or WPA Passphrase if needed. To connect the product 1. Insert the product Software CD in the computer CD ROM drive. 2. Follow the instructions on the screen. When you are prompted, connect the product to the computer by selecting Wireless in the Connection Options screen. Follow the onscreen prompts to enter your wireless network settings.

The product will attempt to connect to the network. If the connection fails, follow the prompts to correct the problem, and then try again. 3. When the setup is finished, you will be prompted to disconnect the USB cable and test the wireless network connection. Once the product connects successfully to the network, you will not need USB cable when installing the product on the subsequent computers. Instead, the product name will appear in the network list and you can select it directly. USB connection nonnetwork connection The HP Deskjet 3510 series supports a rear USB 2.0 High Speed port for connection to a computer. NOTE Web services will not be available with a USB direct connection. NOTE Do not connect the USB cable to the product until you are prompted to do so. If the printer software has been installed, the printer will operate as a plug and play device. If the software has not been installed, insert the CD that came with the device and follow the onscreen instructions. Change from a USB connection to a wireless network If you first setup your printer and installed the software with a USB cable, directly connecting the printer to your computer, you can easily change to a wireless network connection. NOTE The HP Deskjet 3510 series only supports connections using 2.4GHz. Before changing from a USB connection to a wireless network, make sure that the printer is connected to your computer with the USB cable until you are prompted to disconnect the cable. The computer is connected to the wireless network that you intend to install the printer on. Chapter 8 32 Connectivity Connectivity Connect wirelessly to the printer without a router HP Wireless Direct allows your WiFi devices such as computers, smart phones, and tablets, to connect to your printer directly through WiFi, using the process you currently use to connect your WiFi device to new wireless networks and hotspots.

With Wireless Direct, you can print directly to the printer wirelessly, without a wireless router, from your WiFi enabled devices. To get started with Wireless Direct print 1. To use Wireless Direct, you need to turn on Wireless Direct from the control panel, and get the Wireless Direct name and password if you have Wireless Direct security on a. From the Home screen, touch Wireless and then select Settings. b. If the display shows that Wireless Direct is Off, select Wireless Direct and then select On No Security or On With Security. NOTE HP recommends that you turn on security for Wireless Direct. If you turn on security, only users with the password will be able to connect wirelessly to the printer. If you turn off security, anyone with a WiFi device within WiFi range of the printer will be able to connect to the printer. c. Select Display Name to display the Wireless Direct name. d. Select Display Password to display the Wireless Direct password if you have the Wireless Direct security on. 2. From your wireless computer or mobile device, turn wireless on, search for and connect to the Wireless Direct name, for example HPPrint XXDeskjet 3510 series. If you have Wireless Direct security on, enter the Wireless Direct password when prompted. Then print as you normally do from your computer or mobile device. NOTE 1 This method is available if you have already installed the printer software. NOTE 2 Wireless Direct connection provides no Internet access. NOTE 3 The Wireless Direct connection is available even if the printer is also connected to a wireless home network. NOTE 4 All functions that are available on your wireless home network, such as printing, scanning and printer maintenance, are also available when a computer, with the printer software installed, is connected to the printer through Wireless Direct.

Some functions may not be supported if the printer has a simultaneous wireless connection to your home network and Wireless Direct. Connect a new printer If you have not connected the printer to your computer, or you want to connect another new printer of the same model to your computer, you can use the Connect a new printer function to set up the connection. NOTE This method is available if you have already installed the printer software. Follow the onscreen instructions. Connect a new printer 33 Connectivity NOTE 2 This method requires a USB cable. Do not connect the USB cable until prompted to do so. Follow the onscreen instructions. Click here to go online for more information. Advanced printer management tools for networked printers When the printer is connected to a network, you can use the embedded Web server to view status information, change settings, and manage the printer from your computer. NOTE To view or change some settings, you might need a password. You can open and use the embedded Web server without being connected to the Internet. Open the embedded Web server via network NOTE The printer must be on a network and must have an IP address. If you have Wireless Direct security on, enter the Wireless Direct password when prompted. 4. In a supported Web browser on your computer, type the following address 168.223.1. About cookies The embedded Web server EWS places very small text files cookies on your hard drive when you are browsing. These files let the EWS recognize your computer the next time you visit. For example, if you have configured the EWS language, a cookie helps remember which language you have selected so that the next time you access the EWS, the pages are displayed in that language.

<http://www.drupalitalia.org/node/79849>